


Sensor Mounting Detail - Model QZ02L Velocity/Level Sensor

 


1. Choose a sensor mounting location where silt or deposits are least likely to accumulate.
2. For best results flow should be evenly distributed across the channel and relatively free of turbulence. Avoid vertical drops, obstructions or elbows immediately up and downstream from the sensor. Locate the QZ02L sensor at least 10 times maximum Head (level) from these flow disturbances.
3. Mount the QZ02L sensor with the stainless steel bracket and hardware supplied. Ensure that the sensor is parallel to the water surface (check with a level).
4. Clip or tie wrap the sensor cable securely to the pipe or channel wall.

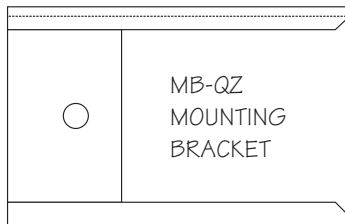

TOP VIEW



SIDE VIEW

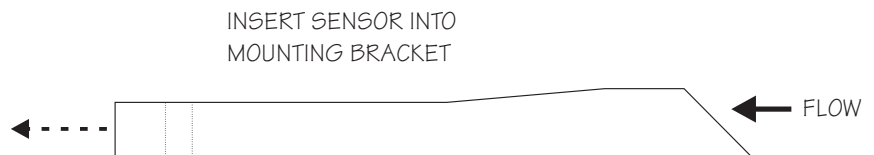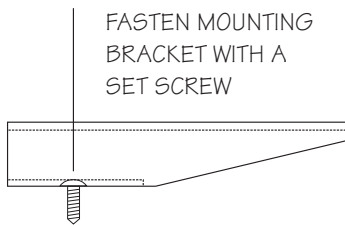

FASTEN SENSOR
CABLE TO PIPE OR
CHANNEL WITH
METAL CLIPS OR
TIE WRAPS

END VIEW

